

Amana[®]

Microwave Convection Oven Use and Care Manual

**RMC800E
RMC800W**

Attention:

Keep these instructions for future reference. If microwave oven changes ownership, be sure this manual accompanies microwave oven.

Contents

Model Identification _____	2	Micro Time Entry Cook _____	9
Important Safety Instructions _____	3	Auto Accu-Thaw™ _____	9
Electrical Requirements _____	6	Convection Cooking _____	10
Grounding Instructions _____	6	Combination Cooking _____	10
Power Supply Cord _____	6	Auto Weight Combination Cooking _____	11
Microwave Power _____	6	Three-Program Cooking _____	11
Radio Interference _____	6	Child Lock _____	11
Installation _____	6	Popcorn Cooking _____	12
Unpacking Oven _____	6	Hold Warm _____	12
Oven Placement _____	6	Reheat _____	12
Feature Diagram _____	7	Regular Timer _____	12
How the Microwave/Convection Oven Works _____	7	Utensils _____	13
Control Panel _____	8	Microwave Utensil Check Test _____	14
Operation _____	9	Care and Cleaning _____	14
Clock _____	9	Oven Light _____	15
		Before Calling for Service _____	15
		Asure™ Extended Service Plan _____	16

Model Identification

Please read this Use and Care Manual thoroughly. This manual provides proper maintenance information for maximum benefit of the features selected.

Complete the enclosed registration card and promptly return. If registration card is missing, call Consumer Affairs department at **1-800-843-0304**. If outside U.S.A., call 1-319-622-5511.

When contacting Amana, provide product information. Product information is located on the appliance nameplate located on control panel escutcheon between door and control. Record the following information:

Model Number: _____
Serial No.: _____
Date of purchase: _____
Dealer's name and address: _____

Keep a copy of sales receipt for future reference or in case warranty service is required.

If something is operating incorrectly, read "Before Calling for Service" section on page 15. Any further questions or to locate an **authorized** servicer, call **1-800-628-5782** inside the U.S.A. or 1-319-622-5511 outside the U.S.A. We recommend contacting an Amana authorized servicer if service is required.

IMPORTANT SAFETY INSTRUCTIONS



Recognize this symbol as a **SAFETY** message



WARNING

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD BE FOLLOWED TO REDUCE THE RISK OF BURNS, ELECTRICAL SHOCK, FIRE, INJURY TO PERSONS, OR EXPOSURE TO EXCESSIVE MICROWAVE ENERGY:

1. **READ** all instructions before using the appliance.
2. **READ AND FOLLOW** the specific “**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**” found on page 5.
3. This appliance **MUST BE GROUNDED**. Connect only to properly grounded outlet. See “**GROUNDING INSTRUCTIONS**” on page 6.
4. Install or locate this appliance **ONLY** in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers – for example, closed glass jars – may explode and **SHOULD NOT** be **HEATED** in this oven.
6. Use this appliance **ONLY** for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook. It is not designed for industrial or laboratory use.
7. As with any appliance, **CLOSE SUPERVISION** is necessary when used by **CHILDREN**.
8. **DO NOT** operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced **ONLY** by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.
10. **DO NOT** cover or block any openings on the appliance.
11. **DO NOT** store this appliance outdoors. **DO NOT** use this product near water – for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
12. **DO NOT** immerse cord or plug in water.
13. Keep cord **AWAY** from **HEATED** surfaces.
14. **DO NOT** let cord hang over edge of table or counter.
15. See door cleaning instructions on page 14.
16. **DO NOT** operate any heating or cooking appliance beneath this appliance.
17. **DO NOT** mount unit over or near any portion of a heating or cooking appliance.
18. **DO NOT** mount over a sink.
19. **DO NOT** store anything directly on top of the appliance surface when the appliance is in operation.
20. Oversized foods or oversized utensils should not be inserted in a microwave/convection oven as they may create a fire or risk of electrical shock.
21. **DO NOT** clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving risk of electrical shock.
22. **DO NOT** use paper products when appliance is operated in convection or combination mode.
23. **DO NOT** store any materials, other than manufacturer's recommended accessories, in this appliance when not in use.
24. **DO NOT** cover racks or any other part of the oven with metal foil. This will cause overheating of the oven.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS



CAUTION

TO REDUCE THE RISK OF FIRE IN THE OVEN CAVITY:

- a. **DO NOT** overcook food. Carefully attend appliance if paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
- b. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
- c. If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
IF THE DOOR IS OPENED THE FIRE MAY SPREAD!
- d. **DO NOT** use the cavity for storage purposes. **DO NOT** leave paper products, cooking utensils, or food in the cavity when not in use.

THIS APPLIANCE **MUST** BE SERVICED ONLY BY QUALIFIED SERVICE PERSONNEL. CONTACT YOUR NEAREST AUTHORIZED SERVICE FACILITY FOR EXAMINATION, REPAIR, OR ADJUSTMENT.



CAUTION

TO AVOID PERSONAL INJURY OR PROPERTY DAMAGE, OBSERVE THE FOLLOWING:

1. Always press STOP/RESET before programming oven.
2. Do not deep fat fry in oven. Fat could overheat and be hazardous to handle.
3. Do not cook or reheat eggs in shell or with an unbroken yolk. Pressure may build up and erupt. Pierce yolk with a fork or knife before cooking. Do not reheat previously cooked eggs in the microwave oven unless finely chopped or scrambled.
4. Pierce skin of potatoes, tomatoes, or other foods with a "skin" before cooking in microwave oven. This allows steam to escape during cooking.
5. Do not home can in microwave oven. Home canning is generally done with metal lids. Since metal lids reflect heat, product may not be heated uniformly to 212°F or above. Food could deteriorate. USDA extension specialists do not recommend home canning in microwave ovens.
6. Remove excess fat from meats and poultry to prevent splattering.
7. Do not heat baby bottles in microwave oven.
8. Briskly stir or pour liquids before heating to prevent spontaneous boiling or eruption. Do not overheat. If air is not mixed into a liquid, liquid can erupt in oven or after removal from oven.
9. All uncooked foods should be heated to a final internal temperature of at least 165°F. Some foods require higher temperatures. These recommended temperatures kill most food borne, disease causing organisms. Some common visual signs that indicate the cooking temperature has been reached:
 - Food steams throughout, not just around edges.
 - Center bottom of dish is very hot to the touch.
10. If using a microwave popcorn popper, use according to manufacturer's instructions. Do not continue to heat after popping has stopped. Popcorn will scorch or burn. Do not leave oven unattended.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

11. Use only popcorn in packages designed and labeled for microwave use. Pop according to package directions, beginning with the minimum amount of time recommended. Use caution when handling hot popcorn bag.
12. Microwave convenience foods are often packaged in specially designed packaging. Special plates, lids, containers, or other unique packaging materials may be used. Susceptor packing material (a thin, metalized plastic film) is frequently used to help brown and make crisp foods such as microwave pizzas, French fries, or fish sticks. Be sure to follow food package instructions carefully. Contact convenience food manufacturer with questions concerning these products. Amana Refrigeration, Inc., does not endorse any brand of microwave convenience foods, or any type of microwave food packaging.
13. Do not operate microwave oven empty. This could damage the oven.
14. Do not use regular cooking thermometers in oven. Most cooking thermometers contain mercury and may cause "arcing", malfunction, and/or damage to oven.
15. Metal or ceramic accessories which are designed to absorb microwave energy to provide heat may be used with caution. Test device before use (See "Microwave Utensil Check Test" on page 14). Read and follow manufacturer's instructions provided with the accessory. Contact accessory manufacturer with questions concerning these accessories. Amana Refrigeration, Inc., does not endorse any brand of accessory.
16. Never use newspapers in oven since paper may ignite.
17. Pierce or open plastic bags (and other airtight containers) before heating in microwave oven. This allows steam to escape during cooking.
18. Containers may become hot and pot holders may be needed.
19. This oven operates at very high temperatures. The interior surfaces and interior door surface will become hot. Use dry, oven safe mittens to protect hands and arms.
20. Closely supervise any use by children. Make sure they can read instructions and reach controls. Never allow them to lean or swing on oven door.


PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- | | |
|---|--|
| <p>(a) DO NOT attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.</p> <p>(b) DO NOT place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.</p> | <p>(c) DO NOT operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.</p> <p>(d) The oven should NOT be adjusted or repaired by anyone except properly qualified service personnel.</p> |
|---|--|

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

DO NOT UNDER ANY CIRCUMSTANCES CUT OR REMOVE THE ROUND GROUNDING PRONG FROM THE PLUG OR BEND THE POWER PRONGS TO FIT A RECEPTACLE OTHER THAN THE ONE SHOWN FOR YOUR OVEN. SUCH ABUSE OF THE PLUG CAN RESULT IN ELECTRICAL SHOCKS OR OVERHEATING.

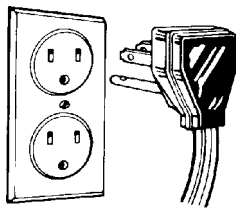

120V-15AMP

⚠ WARNING - IMPROPER USE OF THE GROUNDING PLUG CAN RESULT IN A RISK OF ELECTRIC SHOCK OR DEATH.

This appliance **MUST** be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. **DO NOT** use a two-prong adapter.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

Do not use an extension cord. If the product power cord is too short, have a qualified electrician install a three-slot receptacle. This oven should be plugged into a separate 60 hertz circuit with the electrical rating as shown in the appropriate drawing at left. When a microwave oven is on a circuit with other appliances, an increase in cooking times may be required and fuses can be blown.

Power Supply Cord

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

Microwave Power

Models RMC800E and RMC800W deliver 850 watts of microwave power to the oven cavity.

Installation

Unpacking Oven

- Inspect microwave oven for damage such as dents in door or dents inside oven cavity.
- Report any dents or breakage to source of purchase immediately. Do not attempt to use oven if damaged.
- Remove all materials from oven interior.
- If oven has been stored in extremely cold area, wait a few hours before plugging in.

Radio Interference

Microwave oven operation may cause interference to radio, TV, or similar equipment. To reduce or eliminate interference:

- Clean door and sealing surfaces of oven. See "Care and Cleaning" instructions on page 14.
- Place the radio, TV, etc. away from oven.
- Use properly installed antenna on radio, TV, etc. to obtain stronger signal reception.

Oven Placement

Locate oven on a flat surface. Do not place oven above a gas or electric range. Allow free air flow around oven. Keep all air vents clear. If air vents are covered during operation, oven may overheat. If oven overheats, a sensitive thermal safety device automatically turns oven off. Oven will be inoperable until it has cooled sufficiently.


Built-In Capability

To build-in, use only Amana RMCB2TK27 or RMCW2TK27 trim kits. Trim kits will have a label identifying which oven models may be used.

Feature Diagram

Oven comes with the following:


- Turntable
- Rotating ring assembly
- Convection rack
- Cookbook
- Use and Care Manual

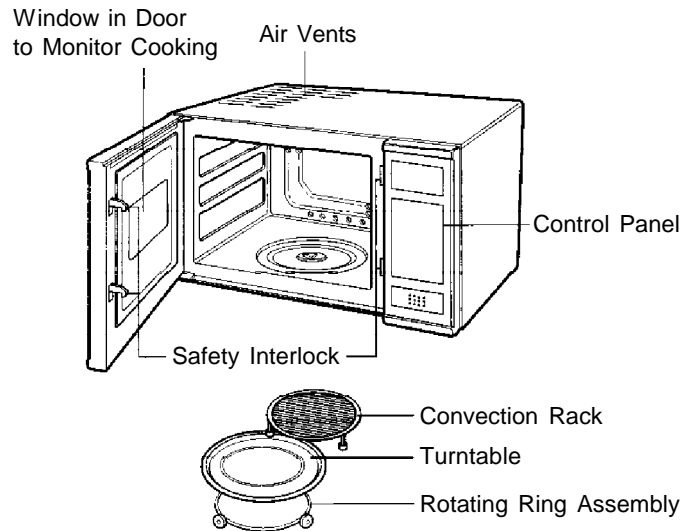

How the Microwave/Convection Oven Works


Microwave Cooking

Microwaves are generated by magnetrons and cook food evenly on rotating turntable.

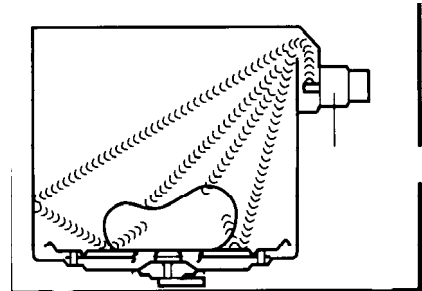


Convection Cooking

This is a method of cooking with hot air from the convection heater situated at rear of oven. This method allows food to be browned evenly without losing any of the juices. Heated air is circulated in oven by a fan. This enables efficient heating and cooking of food. Temperature inside oven can be controlled according to the type and weight of food being cooked. May also be used when surface crusting is desired along with browning.

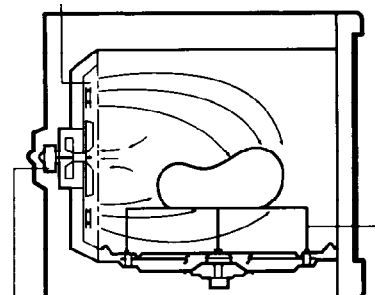

Combination Cooking

Using a combination of microwaves, hot air, and radiant heat, unit cooks alternately, according to programmed cycles.

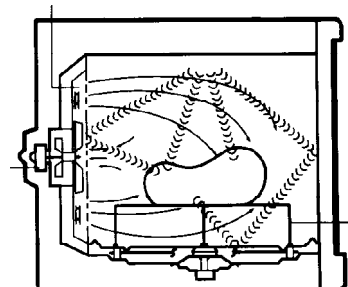

Control Panel

Display Window--Displays time of day, temperature, cooking power, and cooking category.

Indicator Lights--Indicate programmed input.

COMBINATION HIGH--Combination high cooking selector.

COMBINATION LOW--Combination low cooking selector.

CONVECTION--Convection cooking selector.

TIME--Use to select cooking time of combination and convection cooking.

AUTO WEIGHT COMBINATION COOK--Auto weight combination cooking selector.

REHEAT--Auto reheat selector.

MEAT, POULTRY, FISH--Auto Accu-Thaw selector.

MICRO TIME ENTRY--Microwave time cooking selector.

COOKMATIC LEVEL--Use to select cooking power of microwave cooking.

POPCORN--Auto popcorn selector.

Numbers--Use to enter

- time of day
- cooking time
- cooking power
- cooking temperature
- weight of food.

HOLD WARM--Select to keep foods warm.

CLOCK--Use to set time of day.

STOP/RESET--Stops oven and clears all entries except time of day.

START--Use to start oven.

The control panel features a digital display at the top, flanked by indicator lights for CHILD LOCK, AUTO ACCU-THAW, and three PROGRAM buttons (PROG 1, 2, 3). Below the display are buttons for MICRO, CONVECTION, COMBI., and LBS. The panel is divided into several functional sections:

- CONVECTION CONTROL:** Includes buttons for COMBINATION HIGH, COMBINATION LOW, CONVECTION, and TIME.
- AUTO WEIGHT COMBINATION COOK:** A button with a corresponding menu of 7 options: 1. RARE BEEF, 2. MEDIUM BEEF, 3. WELL DONE BEEF, 4. MEDIUM LAMB, 5. WELL DONE LAMB, 6. PORK, 7. POULTRY.
- REHEAT (1 SERVING):** A button with a corresponding menu of 3 options: 1. PLATE OF FOOD, 2. BAKED GOODS, 3. CASSEROLE.
- AUTO ACCU-THAW:** Includes buttons for MEAT, POULTRY, and FISH.
- MICRO TIME ENTRY, COOKMATIC LEVEL, and POPCORN:** A row of three buttons for selecting cooking mode.
- Temperature Selection:** A grid of 9 buttons (1-9) each with a temperature value: 1 (225°F), 2 (250°F), 3 (275°F), 4 (300°F), 5 (325°F), 6 (350°F), 7 (375°F), 8 (400°F), 9 (425°F).
- HOLD WARM, 0, and CLOCK:** A row of three buttons for additional functions.
- STOP/RESET and START:** Two large buttons at the bottom for controlling the oven's operation.

Operation

Please see cookbook supplied with oven for additional operation information.

Clock

Electronic digital clock operates when power is supplied to oven.

1. When oven is plugged in, ":0" displays.
2. Press **CLOCK**. Colon disappears from display.
3. Press numbers for correct time of day. The selected time of day appears in display. For example, to set the clock for 12:30, press **1,2,3,0** in sequence. Clock does not designate a.m. or p.m.
4. Press **CLOCK**.

Notes:

- If time of day is not set, display counts up per minute.
- To reset time of day, follow steps 2-3 above.
- Set time of day from 1:00 to 12:59. "E" displays and signal sounds if numbers are entered incorrectly. Press STOP/RESET.

Micro Time Entry Cooking

1. Press **MICRO TIME ENTRY**. "0" displays and PROG 1 indicator light blinks.
2. Press numbers for desired cooking time. Selected numbers display.
3. Press **COOKMATIC LEVEL**. "P-HI" displays. Note: To cook at high power, press **START**.
4. Press number for desired cooking power. Selected power displays. For example, to cook at 70% power, press number 7. "P-70" displays.
5. Press **START**. Oven begins cooking. Oven light and MICRO indicator light turn on. PROG 1 indicator light stops blinking. Display alternates showing cooking time counting down and power level. When cooking is complete, signal sounds. "End" displays.
6. Press **STOP/RESET** to return display to time of day.

 
Auto Accu-Thaw

1. Press **MEAT, POULTRY**, or **FISH**. Selected category appears (dEF1, dEF2, or dEF3 respectively) and AUTO ACCU-THAW indicator light blinks in display window.
2. Press numbers for desired cooking weight. Selected weight displays. For example to set 1.5 pounds, press **1** and **5** in sequence. Note: Maximum weight limit is 9.9 pounds. If more than this is entered, "E" displays for error. Press numbers to reenter weight.
3. Press **START**. Defrost cycle begins. Oven light turns on. Preprogrammed defrosting time counts down.
 - Signal sounds halfway through cooking time. Press **STOP/RESET** to stop oven. Open oven door and turn food over. Press **START** to resume defrosting.
 - When defrosting is complete signal sounds and "End" displays.
4. Press **STOP/RESET** to return display to time of day.

Convection Cooking

Preheat Oven

Oven must be preheated when cooking with convection cooking method alone.

1. Press **CONVECTION**. "350F" displays. PROG1 indicator light blinks.
2. Press number with desired oven temperature.
For example, if 400°F, press **8**.  Selected temperature displays.
Note: Temperatures are located in upper left corner of number pads.
3. Press **START**. Oven turns on. "Pr-H" and current temperature alternately display.
Note: Before oven reaches selected temperature, current temperature displays in rising 5°F increments. If oven temperature is lower than 200°F, "LO F" displays until oven temperature reaches 200°F.
4. When preheat is complete, signal sounds and oven displays 30 minutes counting down. Press **STOP/RESET** twice and proceed with operation.

Operation

1. Press **CONVECTION**. "350F" displays. PROG1 indicator light blinks.
2. Press number with desired oven temperature. Selected temperature displays.
3. Press **TIME**. "0" displays.
4. Press numbers for desired cooking time. Selected time displays.
5. Press **START**. Oven begins cooking. CONVECTION indicator light turns on.
Note: Before oven reaches selected temperature, current temperature displays in rising 5°F increments. If oven temperature is lower than 200°F, "LO F" displays until oven temperature reaches 200°F.

Combination Cooking

1. Press **COMBINATION HIGH** or **COMBINATION LOW**. "HI" or "LO" displays respectively and PROG1 indicator light blinks.
2. Press **TIME**. "0" displays.
3. Press numbers for desired cooking time. Selected cooking time displays.
4. Press **START**. Combination cooking begins. COMBI indicator light turns on. Selected cooking time counting down and "HI" or "LO" alternately display. When cooking is complete signal sounds. "End" displays.
5. Press **STOP/RESET** to return display to time of day.



Caution

To avoid burns always use dry, oven-safe mittens when using this appliance.

Auto Weight Combination Cooking

1. Press **AUTO WEIGHT COMBINATION COOK**. "AC-1" displays.
2. To select desired Auto Weight Combination category, press **AUTO WEIGHT COMBINATION COOK** repeatedly. See category selection chart at right. For example, to select pork category, press **AUTO COMBINATION COOK** 6 times.
3. Press numbers for desired cooking weight. LBS indicator light turns on. Selected weight displays. For example, to set 1.5 pounds, press **1** and **5** in sequence.
4. Press **START**. Auto Weight Combination cooking begins. COMBI indicator light turns on. Preprogrammed cooking time counting down and Auto Combination category (AC-X) alternately display.
Note: Maximum weight limit is 5.9 pounds for all categories. If more than this is entered, "E" displays for error. Press numbers to reenter weight.
 - Signal sounds halfway through cooking time. Press **STOP/RESET** to stop oven. Open oven door and turn food over. Press **START** to resume cooking.
 - When Auto Weight Combination Cooking is complete, oven signal sounds. "End" displays.
5. Press **STOP/RESET** to return display to time of day.

Auto Combination Sequence	Food Category
1	Rare Beef
2	Medium Beef
3	Well Done Beef
4	Medium Lamb
5	Well Done Lamb
6	Pork
7	Poultry

Minimum food weight is 0.1 pounds.
Maximum food weight is 5.9 pounds.



Caution

To avoid burns always use dry, oven-safe mittens when using this appliance.

Three-Program Cooking

There are three memory programs. Micro Time Entry, Convection, and Combination-High or Low can be set in the three programs. The programming example is as follows: first program 4 minutes, high power; second program 10 minutes, 60% power; and third program 15 minutes, 400°F convection mode.

1. Press **MICRO TIME ENTRY**. "0" displays and PROG 1 indicator light blinks.
2. Press **4, 0, 0** in sequence to enter program 1 cooking time. "400" displays.
3. Press **MICRO TIME ENTRY**. "0" displays. PROG 2 indicator light blinks.

4. Press **1, 0, 0, 0** in sequence to enter program 2 cooking time. "1000" displays.
5. Press **COOKMATIC LEVEL**. "P-HI" displays.
6. Press **6** to enter power level 6. "P-60" displays.
7. Press **CONVECTION**. "350F" displays. PROG 3 indicator light blinks.
8. Press **8** to enter temperature. "400F" displays.
9. Press **TIME**. "0" appears in display.
10. Press **1, 5, 0, 0** in sequence to enter time for program 3 cooking time. "1500" displays.
11. Press **START**.

Child Lock

Oven programs and appears to operate. Oven produces no microwave power or convection heat.

1. Press and hold **0** until signal sounds. CHILD LOCK indicator light comes on, and "L" displays.

2. To cancel child lock, press **0** until signal sounds and CHILD LOCK indicator light turns off. Press **STOP/RESET** before making next selection.

Popcorn Cooking

1. Place convection rack on turntable. Place popcorn package on top of convection rack.
2. Press **POPCORN**. "PoP" displays.
3. Press **START**. Oven begins cooking. Oven light turns on. Preprogrammed cooking time and "PoP" alternately display. When cooking is complete signal sounds and "End" displays. Note: If additional time is required, use high (100%) power in 20 second increments. Never microwave bag of popcorn more than 5 minutes.

Hold Warm

Hold food at warm temperature for 60 minutes.






 

 
1. Press **HOLD WARM**. "Hold" displays.
2. Press **START**. Oven begins hold warm cycle. "Hold" displays. When holding time is complete, signal sounds. "End" displays.
3. Press **STOP/RESET** to return display to time of day.

Reheat

1. Press **REHEAT**. "rH-1" displays.
2. Press **REHEAT** repeatedly for desired category of reheat (see chart on control panel). For example, to select CASSEROLE, press **REHEAT** three times. "rH-3" displays.
3. Press **START**. Reheat begins. Oven light turns on. Cooking time counting down and reheat category alternately display. When reheat cycle is complete signal sounds. "End" displays.
4. Press **STOP/RESET** to return display to time of day.

Regular Timer

1. Press **MICRO TIME ENTRY**. "0" displays and PROG 1 indicator light blinks.
2. Press numbers for desired time. Time displays. Note: Time can be set for up to 99 minutes and 99 seconds in one program setting. It is possible to set time for a longer period by utilizing second program setting.
3. Press **COOKMATIC LEVEL**. "P-HI" displays.
4. Press **0**. "p-0" displays. If "0" is pressed more than once, "P-HI" reappears. **Important:** If "0" power is not programmed oven generates microwaves.
5. Press **START**. MICRO indicator light turns on. Selected time counting down and "P-0" alternately display. When time has elapsed signal sounds. "End" displays.
6. Press **STOP/RESET** to return display to time of day.

Utensils	Microwave*	Convection	Combination*
 Heat-Resistant Glass, Glass Ceramic	YES*	YES	YES
 Ceramic, China	YES (Do not use china with gold or silver trim.)	YES	YES
 Metal Cookware	NO	YES	NO
 Non Heat-Resistant Glass	NO	NO	NO
 Microwave Plastics	YES*	NO	NO
 Plastic Wrap, Wax Paper	YES*	NO	NO
 Paper Products	YES*	NO	NO
 Straw, Wicker, and Wood	YES*	NO	NO

*Also see "Microwave Utensil Check Test" on page 14.

Microwave Utensil Check Test

Use the following test to check utensils for microwave safeness:

1. Place glass measuring cup of water next to empty dish to be tested in unit.
2. Heat on full power for one minute.
3. Check temperature of tested dish.

If dish remains cool and water is hot, dish is microwave safe. If dish is slightly warm, use for short term cooking only. If dish is hot and water is cool, do not use. Dish remains cool if not absorbing microwaves and microwaves are being absorbed by water. Dish becomes hot if absorbing microwaves.

Care and Cleaning



Caution

To avoid burns allow oven to cool before cleaning.

Interior, Exterior and Door

If walls, floor, and door of microwave oven become splattered, wipe with paper towel or clean with mild detergent in warm water using soft sponge or cloth. Wring sponge or cloth to remove excess water before wiping unit. If desired, boil a cup of water in microwave oven to loosen soil before cleaning:

- Do not use cleaners containing ammonia. These could damage finish.
- Never pour water into microwave oven bottom.
- Do not use water pressure type cleaning systems.
- Do not allow water to seep into ventilation openings on oven exterior.

Turntable

Wash by hand using mild detergent in warm water or wash in dishwasher.

Control Panel

Open oven door to prevent oven from accidentally starting. Wipe with a damp cloth followed immediately by a dry cloth. Touch STOP/RESET after cleaning to clear screen in case any pads were pressed.

Discharge Air Vents

There will be a slight buildup of cooking vapors along discharge louvers in back of oven on right side. Clean air vent with damp cloth and dry.

Oven Light

Oven light must be changed by authorized Amana servicer. See information on contacting a servicer below.

Before Calling for Service

Readout display does not light up:

- Confirm unit is plugged in on dedicated circuit.
- Confirm unit is on grounded and polarized circuit.
- Check fuse or circuit breaker. Test circuit is operable by plugging another item in wall outlet.

Readout display appears wrong:

- Press **STOP/RESET**.

Microwave oven does not operate:

- Confirm door is securely closed.

Food is overcooked:

- Confirm cooking at correct power level.

Food is undercooked:

- Confirm unit is plugged into dedicated circuit.
- Confirm cooking at correct power level.



WARNING

To avoid electrical shock, personal injury or death do not remove outer case at any time. Only authorized servicer should remove outer case. If removed by another person, warranty is voided.

Any questions or to locate an **authorized** Amana® servicer, call **1-800-843-0304** inside the U.S.A or 319-622-5511 outside U.S.A. Contact an **authorized** Amana® servicer if service is required. When contacting us, provide product information including **model and serial numbers** and **date of purchase**. Model and serial numbers are located on nameplate.

Asure™ Extended Service Plan

Amana is pleased to offer long-term service protection on this new microwave oven. Asure™ Extended Service Plan is specially designed to supplement Amana's strong warranty. Asure™ provides budget-protecting coverage on microwave oven for up to five full years and includes parts, labor and travel charges.

A participating Amana dealer has details or contact:

Amana Refrigeration, Inc.

Consumer Affairs Department

Amana, IA 52204

1-800-843-0304

If outside U.S.A., 1-319-622-5511